


THE ORIGINAL 8' X 46" HAY FEEDER

Item # CP846

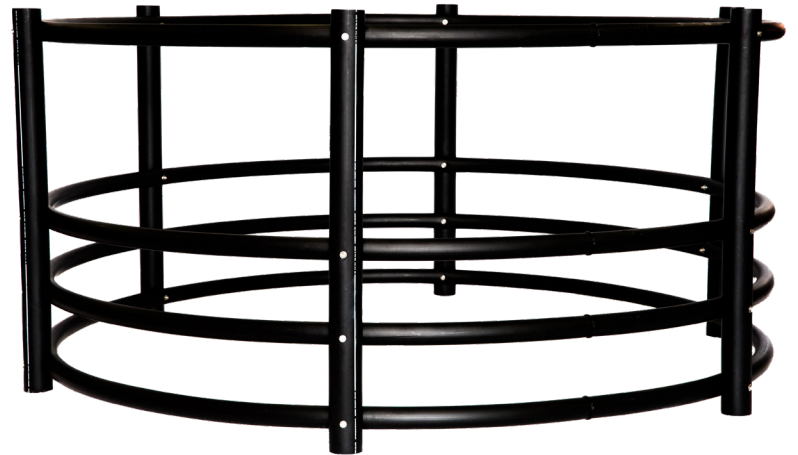

Tools Required:

- ½ in. Wrench
- ½ in. Socket
- Small Hammer

Components:

- (4) 8' Rings
- (6) 46" Rings
- (1) Bolt Kit

Instructions:

Step 1: Begin assembly by placing all rings with the welds in line and the Century Products trademark facing upward. Keep all welds between the same two legs.

Step 2: Start with the bottom ring and bolt the ring on the inside of the leg with the lock nut to the inside of the ring.

Step 3: Tighten lock nuts until the washer barely indents the ring. We suggest not using a cordless drill or impact; nuts should be tightened by hand.

Step 4: Repeat this step for all rings.

Step 5: Periodically check to ensure that the bolts are still secure.